FPM-SPM PRESSURE FILTERS





MATERIALS

Housing: Anodized aluminium alloy

Bypass valve: Steel

Seals: NBR Nitrile (FKM - on request fluoroelastomer)

Indicator housing: Brass

PRESSURE

Max working: 21 MPa (210 bar)

Collapse, differential for the filter element (ISO 2941):

2,1 MPa (21 bar)

BYPASS VALVE

Setting: 600 kPa (6 bar) \pm 10%

WORKING TEMPERATURE


From -25° to +110° C

COMPATIBILITY (ISO 2943)

Full with fluids: HH-HL-HM-HV-HTG (according to ISO 6743/4)
For fluids different than the above mentioned,

For fluids different than the above mentioned please contact our Customer Service.

HYDRAULIC DIAGRAM

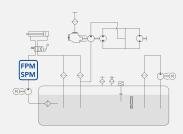

Is this datasheet the latest release? Please check on our website.







ORDERING AND OPTION CHART

Р	M	COMPLETE FILTER FAMILY			FILTER ELEMENT FAMILY	Е	Р
		SIZE & LENGHT	21	22	SIZE & LENGHT		
		PORT TYPE					
		B = BSP thread	В	В			
		N = NPT thread	N	N			
		S = SAE thread	S	S			
		PORT SIZE					
		04 = 1/2"	04	04			
		06 = 3/4"	06	06			
		08 = 1"	08	08			
		BYPASS VALVE			_		
_		W = without	W	W			
		C = 600 kPa (6 bar)	С	С			
		SEALS			SEALS		
_		N = NBR Nitrile	N	N			
		F = FKM Fluoroelastomer	F	F			
		FILTER MEDIA			FILTER MEDIA		
		FA = fibreglass 5 μm(c) β>1.000	FA	FA			
		FB = fibreglass 7 μm(c) β>1.000	FB	FB			
		FC = fibreglass 12 μm(c) β>1.000	FC	FC			
		FS = fibreglass 16 μ m(c) β >1.000	FS	FS			
		FD = fibreglass 21 μ m(c) β >1.000	FD	FD			
		FE = fibreglass 30 μ m(c) β >1.000	FE	FE			
		CLOGGING INDICATOR**			_		
		03 = port, plugged	03	03			
		5E = visual differential 500 kPa (5 bar)	5E	5E	1		
		6E = electrical differential 500 kPa (5 bar)	6E	6E]		
		7E = indicator 6E with LED	7E	7E]		
		T2 = elect. diff. 500 kPa (5 bar) with thermostat 30°C	T2	T2]		
Х	Χ	ACCESSORIES			_		

SPARE PARTS ELEMENTS





ORDERING AND OPTION CHART

P N	COMPLETE FILTER FAMILY			FILTER ELEMENT FAMILY	С	С	Н
	SIZE & LENGHT	301	302	SIZE & LENGHT			
	FILTER MEDIA			FILTER MEDIA			
	FT = fibreglass 5 μm(c) β>1.000 Δp 2MPa (20 bar)	FT	FT				
	FC = fibreglass 7 μm(c) β>1.000 Δp 2MPa (20 bar)	FC	FC				
	FD = fibreglass 12 μ m(c) β >1.000 Δ p 2MPa (20 bar)	FD	FD				
	FS = fibreglass 16 μm(c) β>1.000 Δp 2MPa (20 bar)	FS	FS				
	FV = fibreglass 21 μ m(c) β >1.000 Δ p 2MPa (20 bar)	FV	FV				
	SEALS 1 = NBR Nitrile			SEALS			
			1				
	2 = FKM Fluoroelastomer	2	2				
	BYPASS VALVE			_			
	S = without	S	S				
	C = 600 kPa (6 bar)	С	С				
	PORT TYPE			_			
	B = BSP thread	В	В				
	N = NPT thread	N	N				
	S = SAE thread	S	S				
	PORT SIZE						
	3 = 1/2" (N3 not available)	3	3				
	4 = 3/4" (F4 not available)	4	4				
	5 = 1" (G5 not available; F5 for FPB2 only)	5	5				
	CLOGGING INDICATOR**						
	03 = port, plugged	03	03				
	5E = visual differential 500 kPa (5 bar)	5E	5E				
	6E = electrical differential 500 kPa (5 bar)	6E	6E				
	7E = indicator 6E with LED	7E	7E				
	T2 = elect. diff. 500 kPa (5 bar) with thermostat 30°C	T2	T2				
х	ACCESSORIES						
	XX = no accessory available	XX	XX				

SPARE SEAL KIT

	NBR	FKM
FPM21 SPM301	521.0011.2	521.0010.2
FPM22 SPM302	521.0011.2	521.0010.2

NOTE


^{**} When the filter is ordered with FKM seals, the first digit of the indicator code is a letter (please see Clogging Indicator Chapter for further details)








INSTALLATION DRAWING

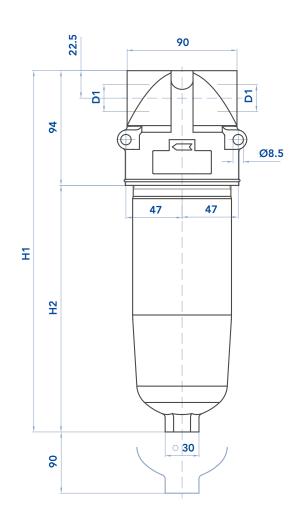

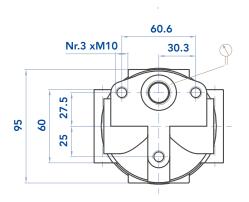

FILTER HOUSING

	D1	H1	H2	R	Kg
FPM21 SPM301	1/2" - 3/4" - 1"	205	111	100	1,5
FPM22 SPM302	1/2" - 3/4" - 1"	298	197	100	2,0








MAINTENANCE

The best time to change your filter element is just before it reaches its maximum dirt-holding capacity. For this reason, we recommend to monitor the pressure of the hydraulic oil flowing through the filter with a clogging indicator. When it is time to change the filter element, switch off the system before opening the filter housing and make sure there is no pressure in the filter. Unscrew the bowl and remove the dirty filter element. Replace it with an original UFI element, verifying the

part number on the filter label or on the catalogue. Clean the bowl; check the gaskets conditions and replace if necessary. Insert the clean element into his seat, handling with care and cleanliness. Screw the housing until it stops, with a tightening torque of 60 Nm +5/0.

We recommend the stocking of a spare UFI filter element for timely replacement when required.

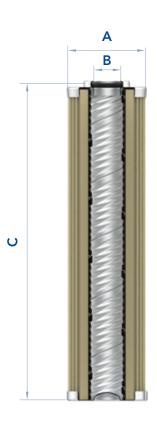



FILTER ELEMENT

	Α	В	С	Kg	AREA (cm²) Media F+
EPB21 CCH301	23,5	52	115	0,25	975
EPB22 CCH302	23,5	52	210	0,25	1.930

The used filter elements cannot be cleaned and are classified as "Dangerous waste material". They must be disposed according to local laws by authorized Companies.

Verify that the Company you choose has the expertise and authorization to dispose this type of waste material.








PRESSURE DROP CURVES (ΔP)


The "Assembly Pressure Drop (Δp) " is obtained by adding the pressure drop values of the Filter Housing and of the Clean Filter Element corresponding to the considered Flow


Rate and it must be lower than 120 kPa (1,2 bar) and should never exceed 1/3 of the bypass valve setting.

FILTER HOUSING PRESSURE DROP (mainly depending on the port size)

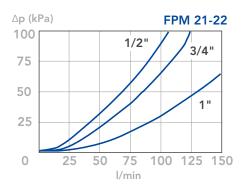


CLEAN FILTER ELEMENT PRESSURE DROP WITH F+ AND C+MEDIA (depending both on the internal diameter of the element and on the filter media)

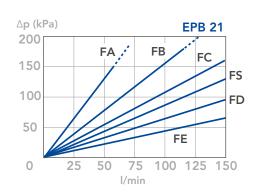

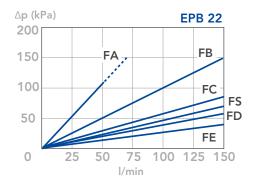

BYPASS VALVE PRESSURE DROP

When selecting the filter size, these curves must be taken into account if it is foreseen that any flow peak is to be absorbed by the bypass valve, it also must be of proper configuration to avoid pressure peaks. The valve pressure drop is directly proportional to fluid specific gravity.

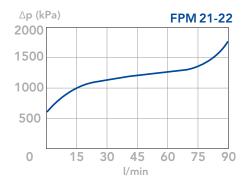

N.B.

All the curves have been obtained with mineral oil having a kinematic viscosity 30 cSt and specific gravity 0,86 Kg/dm3; for fluids with different features, please consider the factors described in the first part of this catalogue. All the curves

are obtained from test done at the UFI HYDRAULIC DIVISION Laboratory, according to the specification ISO 3968. In case of discrepancy, please check the contamination level, viscosity and features of the fluid in use.